

SteelWorx Wall Organizer Mounting Instructions

Tools needed for assembly:

Philips Screwdriver
Pencil or Pen
Hammer (for Drywall)
Drill w/1/8" bit (for Stud) or 3/16" bit (for Drywall)

1. Determine where you want your Organizer to be positioned. For optimum viewing, **we suggest that the top of the Page Holding Bracket be approximately at eye level. For stability, we also recommend mounting the Wall Bracket into a stud.**

2. Using the Wall Bracket as a template, mark the center of the two holes on the back of the Wall Bracket as shown in figure 1.



3. If mounting into a stud, drill the two holes using a 1/8" drill bit. Then using the 1 1/2" screws, attach the Wall Bracket until snug.

If mounting into drywall only, drill the two holes using a 3/16" drill bit. Tap the anchors into the wall using a hammer until flush. Using the 1 1/4" screws, attach the Wall Bracket until snug.


4. Using the four small machine screws and nuts, attach the Page Holding Bracket to the Wall Bracket as shown in figure 2.

5. Install the Organizer Pockets by flexing them slightly at the spine.

HINT: For ease of loading we recommend that you insert your display materials and arrange your Tabs before installing the Pockets onto the Page Holding Bracket.

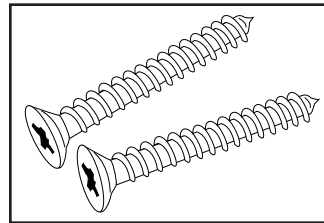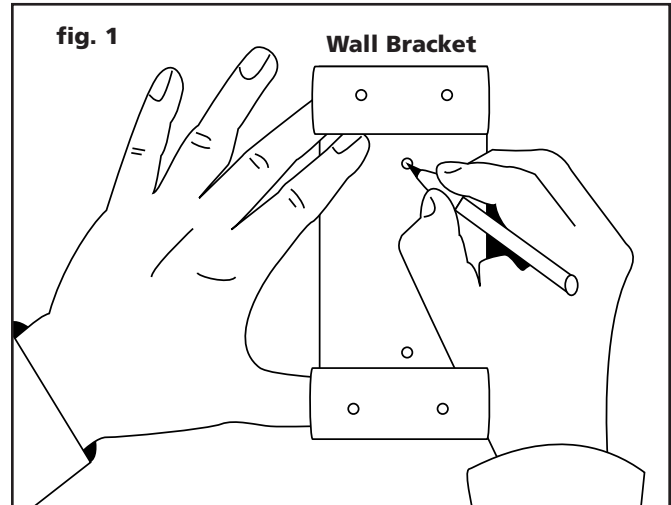

**1 1/2" Screws for
Stud Mounting**

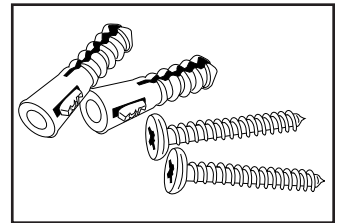

**Anchors & 1 1/4" Screws
for Drywall**

